

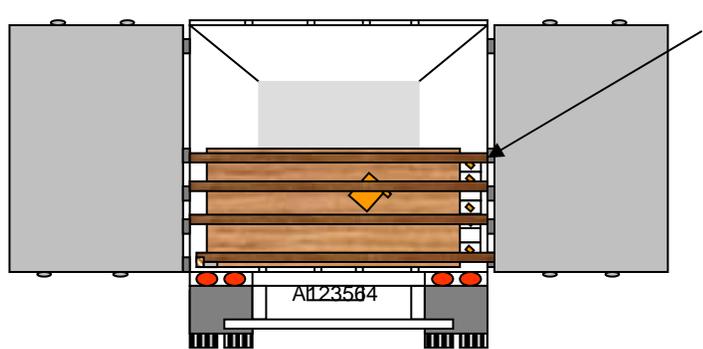


Bull-Board Installation

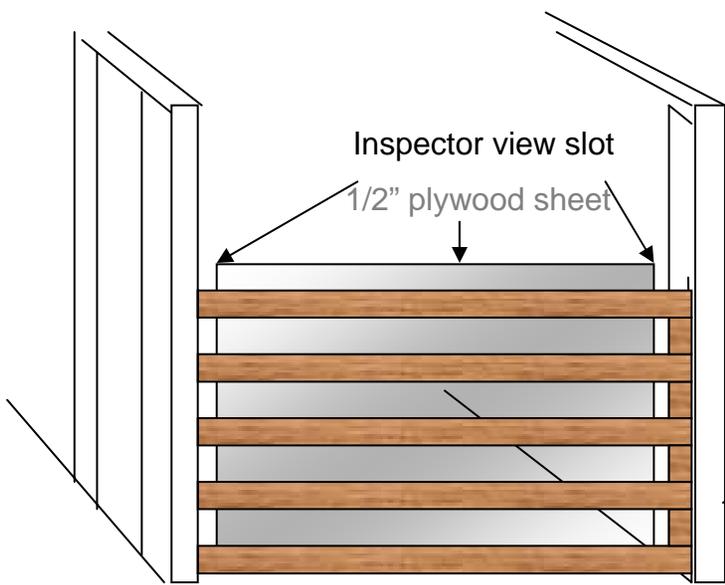


INSPECTOR VIEW SLOTS (Center or side)


Note: VIEW SLOTS SHOULD BE LARGE ENOUGH TO VIEW, PACKAGING, METHOD OF LOADING, BUT NOT LARGE ENOUGH TO ALLOW PACKAGE TO FALL THROUGH VIEWING VOID.

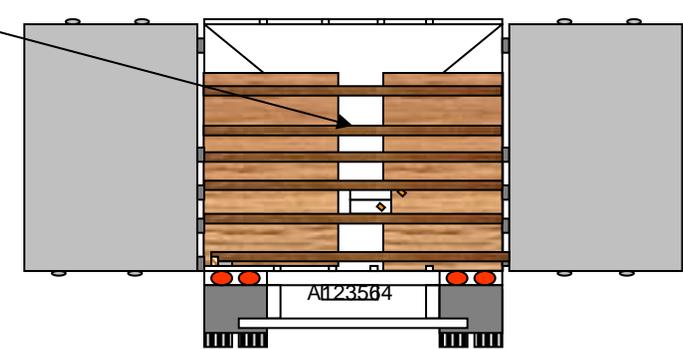

Expanded view

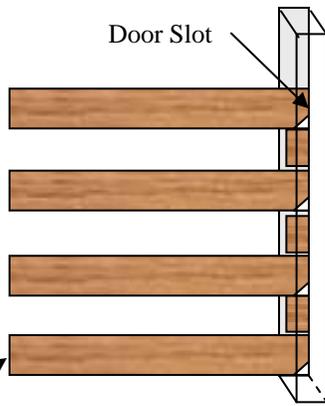

Installation of Bull-Boards

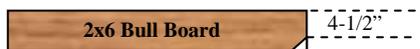- 1) Measure length from inside door slot to inside door slot
 - 2) Cut 2x6 1/16 inch longer then length measure in #1 above
 - 3) Cut bevel into bottom corner of 2x6 for installation into the door slot
- 
- 4) Hammer 2x6 into door slot
 - 5) Insert vertical spacer to maintain alignment
 - 6) repeat steps 1 thru 5
 - 7) solid board bull boards consist of all lateral boards and no vertical spacers

This load plan is intended for general information purposes only and is not recommended for any specific cargo. Other Carriers are not required to accept this load plan or any plan suggested by Union Pacific Railroad. This information is offered to shippers to assist in understanding the rail environment, the shipper is ultimately responsible for choosing how best to package, block and brace its cargo to avoid damage to the cargo and rail equipment.



Union Pacific Damage Prevention
 File: Bull-boards
 Date: 8/6/03 By:WLR